

## Assembly Instructions OSWALD Dining Table

PLEASE NOTE: Check that you have received all components and hardware before assembling. If you are missing any parts fax Euro Style at 415.455.8033 or email: [claims@gotoeurostyle.com](mailto:claims@gotoeurostyle.com)



 
A (8 pcs)  
5/16" x 3"




B (8 pcs)



C (8 pcs)




D (1 pc)

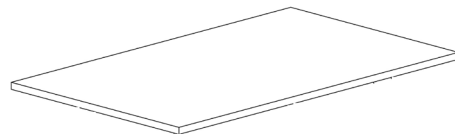

E (1 pc)



F (4 pcs)

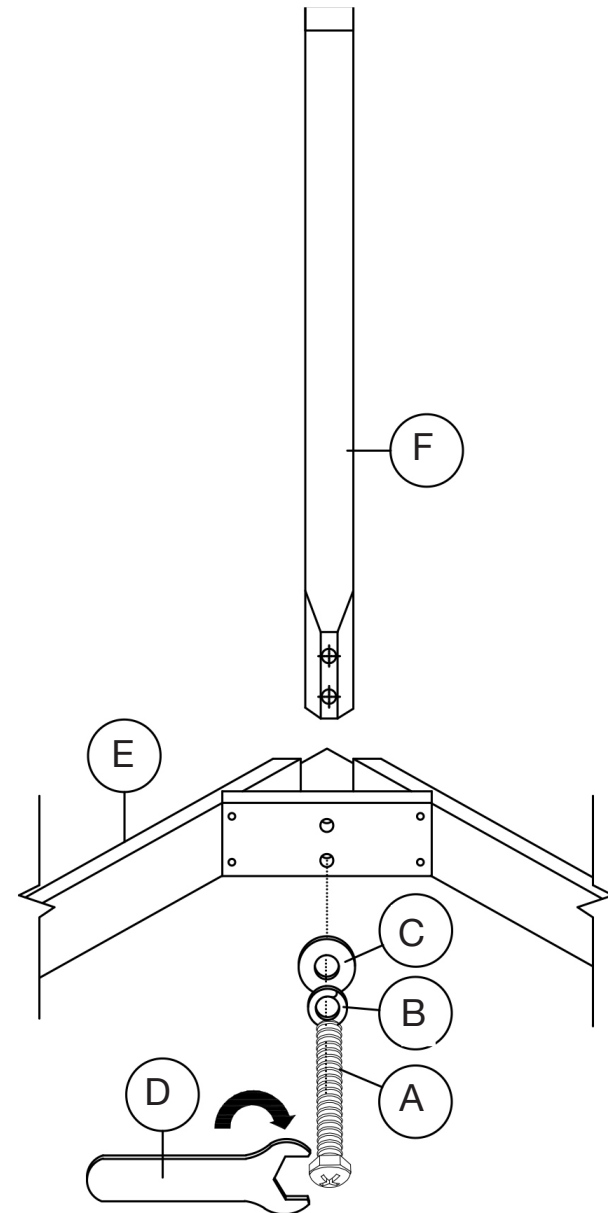

During assembly, hand tighten screw only. When the screw is in place, tighten completely.