

Assembly Instructions SHERWOOD Dining Table

PLEASE NOTE: Check that you have received all components and hardware before assembling.
If you are missing any parts fax Euro Style at 415.455.8033 or email: claims@gotoeurostyle.com



A (1 pc)



B (4 pcs)



C (4 pcs)



D (2 pcs)



E (2 pcs)



F (2 pcs)



G (4 pcs)



Tool

